

# RadStar RS300 Quick Start Guide

1

## Operating the RS300

Plug power adapter marked RadStar Power Supply into any 120VAC outlet.

2

Plug free end of power adapter into left side of RS300. Green LED should come on.

3

Insert key and turn to "Keypad On".

4

Press and hold the [HOLD TO CLEAR] button until the beep tone stops to erase any previously stored test data. There will be a short beep to indicate the memory has been cleared.

5

When you are ready to start the test, turn key to "Measure On" position and remove the key.

IN060-Rev B

# RadStar RS300 Quick Start Guide

1

## Operating the RS300

Plug power adapter marked RadStar Power Supply into any 120VAC outlet.

2

Plug free end of power adapter into left side of RS300. Green LED should come on.

3

Insert key and turn to "Keypad On".

4

Press and hold the [HOLD TO CLEAR] button until the beep tone stops to erase any previously stored test data. There will be a short beep to indicate the memory has been cleared.

5

When you are ready to start the test, turn key to "Measure On" position and remove the key.

IN060-Rev B