

RadStar RS800 Quick Start Guide

1

Plug power adapter marked "RadStar Power Supply" into any 120VAC outlet. Plug free end of power adapter into left side of RS800 – green LED should come on.

2

Insert key and turn to [MEASURE ON] position to begin testing.

NOTE: If unit beeps then the previous test data has not been erased from memory.

3

After the test is complete (normally 48 hours) insert key and turn to [KEYPAD ON]. Test data may be VIEWED, PRINTED or DOWNLOADED by selecting the appropriate function with the [NEXT] button and pressing the [ENTER] key.

4

Test data is cleared by selecting the ERASE? function and holding down the [ENTER] button. The unit will beep and clear memory and then display DATA ERASED!.

View?

Selecting this function with the ENTER button allows the user to view test data stored in memory.

Print?

Selecting this function with the ENTER button allows the user to print test data stored in memory.

Download?

Selecting this function with the ENTER button allows the user to send test data to a PC.

Erase?

Pressing and holding the ENTER button will clear the test data stored in memory.

Delay Mode?

No Delay? (Normal test option)

12 Hr Delay? (Delay to set-up closed house conditions)

24 Hr Delay? (Delay to set-up post mitigation testing)

Use the NEXT button to scroll through delay options and select by pressing ENTER.

Battery Saver?

On?

Off?

Use the NEXT button to scroll through battery saver options and select by pressing ENTER. Turning Battery Saver ON will turn off the LCD display 10 seconds after initiating a test to reduce power consumption and make the battery charge last longer.